

5_{in}1


MULTI-FUNCTION
PARKING DEVICE



www.5in1.co.uk

FITTING
Instructions
1

Wheel Clamp

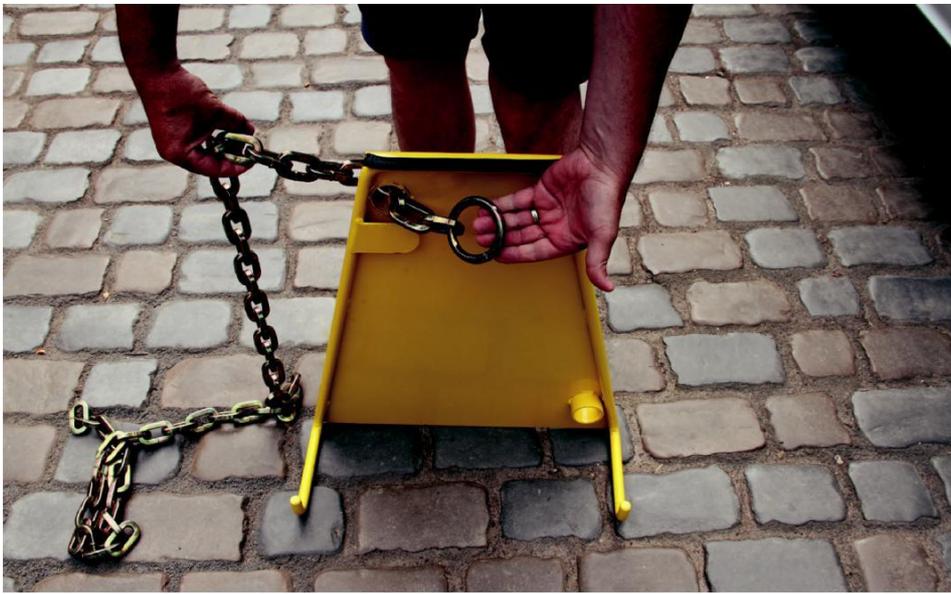

- 1. Feed the chain through the top hole of the clamp plate so that the large ring is tucked behind the back of the plate.*




- 2. Place the wheel clamp plate against the wheel with the stabilizing feet each side of the tyre.*



- 3. Feed the chain with your right hand over the top of your tyre around the suspension leg of the vehicle.*



- 4. Feed the chain around the back of the suspension leg and down towards the bottom hole.*

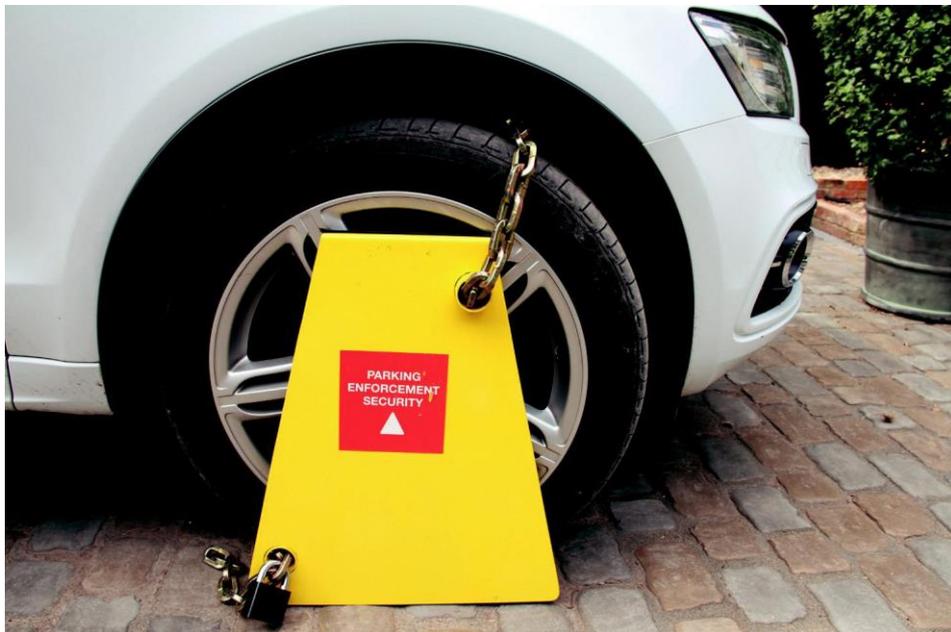


- 5. Pull the chain through the anchor whole keeping it as tight as possible. Then secure the chain with a padlock.*

FITTING
Instructions
2

Parking Post
Bicycle Anchor Park
Motorcycle Ground Anchor
Ground Anchor for A.T.V. and Machinery
Garage Door Lock (up and over)

Tools required:

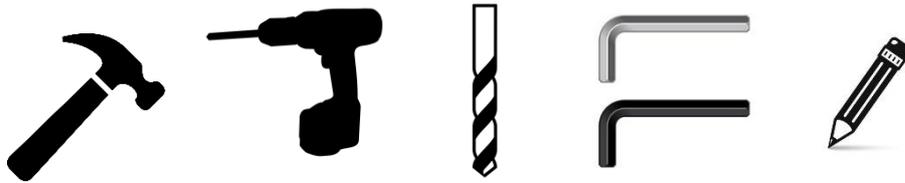

*1. Place the frame where you intend to fit the device.
This applies to parking post and bike anchor.*

*If fitting it for garage lock and anchor, make sure you
leave enough space between the garage door and the two
brackets, so you can open and close the garage door with
just the brackets in place before fixing it.*



2. Slide the two brackets under the feet.



3. Slide out the complete unit leaving the brackets in place.



4. Mark the 4 holes with a pencil on both brackets on the surface.



5. Remove the brackets and drill out the 4 holes where you have marked it.



6. Place the security bolts through the bracket to the smaller hole underneath and tighten both bolts with the Allen key.



7. Now fit the second bracket with the other two security bolts.



8. Now slide the plate with the leg over the security bolts and bracket. Make sure the left hand bracket is on the outside of the bar.



9. Put the security plate over the bracket to secure the frame.



10. Last of all, lock with padlock to secure the device.



The Holt – Church Lane – Warlingham – Chelsham – CR6 9PG

01883 338678

www.5in1.co.uk – sales@5in1.co.uk

